

Plasma Direct Installation Instructions for MAZDA RX-8

 
Thank you for your purchase. Please read this instruction carefully to make a proper and safe installation.

Safety Instructions

- 1. Installation should be made only on designated vehicles and models.
- 2. Never modify or dismantle this product.
- 3. The vehicle should be on a flat surface, with tires blocked to prevent the vehicle from rolling.
- 4. The engine should be off and completely cooled. Be sure the ignition key is not inserted.
- 5. The negative terminal from the battery should be disconnected. Note that this may cause the security alarm to activate. Consult the vehicle owner's manual to prevent this from occurring.
- 6. The engine should be in good operating condition. Any sign of defects should be corrected before installation.
- 7. Make sure you have adequate ventilation before running the engine.
- 8. Installation should be performed by a professional mechanic.
- 9. If the engine performance was previously boosted through modification of the ignition timing or air/fuel ratio, it may require readjustment following installation of the product.
- 10. If any defects are found in the product, discontinue using it immediately and contact the dealer where you purchased the product or us.

Parts Included

Plasma Direct coils 4P






A Caution


Installation Procedure

- Disconnect the negative (minus) battery terminal.


 Note: It takes approx. 20 minuets to reset the ECU.
- 2 Remove the engine cover, air filter box and etc., to expose the ignition coils, so that you can start the installation of the Plasma Direct coils.

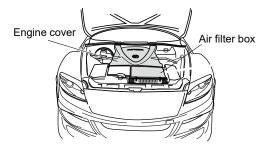


3 Remove the ignition coils, spark plug wires and coil connectors from each coil as illustrated below.

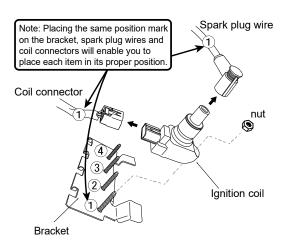


4 Attach the included spacers to the bolts on the bracket.

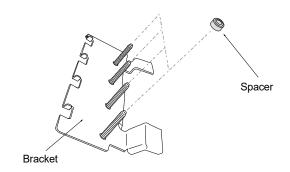

5 Connect the coil connectors, and mount the Plasma Directs onto the bracket.

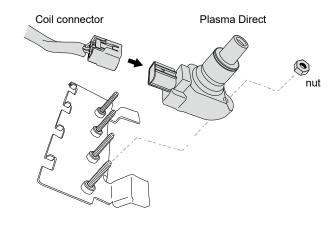

6 Install the spark plug wires to the Plasma Directs.

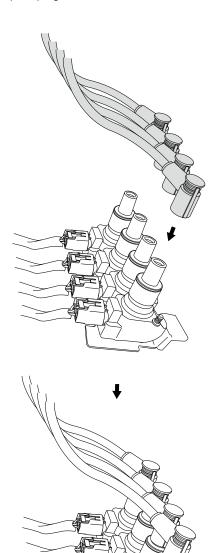

Mount back properly all the components you removed for the installation.

PD4003001R MAZDA 2/2

