 


Plasma Direct Installation Instructions for TOYOTA GR86 / SUBARU BRZ (FA24)

Thank you for your purchase. Please read this instruction carefully for a proper and safe installation.


Safety Instructions



1. Installation should be made only on designated vehicles and models.
2. Never modify or dismantle this product.
3. The vehicle should be on a flat surface, with tires blocked to prevent the vehicle from rolling.
4. The engine should be off and completely cooled. Be sure the ignition key is not inserted.
5. The negative terminal from the battery should be disconnected. Note that this may cause the security alarm to activate. Consult the vehicle owner's manual to prevent this from occurring.
6. The engine should be in good operating condition. Any sign of defects should be corrected before installation.
7. Make sure you have adequate ventilation before running the engine.
8. Installation should be performed by a professional mechanic.
9. If the engine performance was previously boosted through modification of the ignition timing or air/fuel ratio, it may require readjustment following installation of the product.
10. If any defects are found in the product, discontinue using it immediately and contact the dealer where you purchased the product or us.

Parts Included



4 x Plasma Direct coil

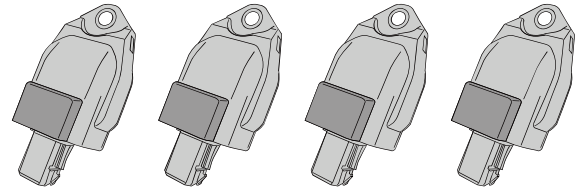


Installation Procedure

- 1 Unfix the ECU (a) and move it out of the way.
Do not disconnect the ECU connector.


Right side

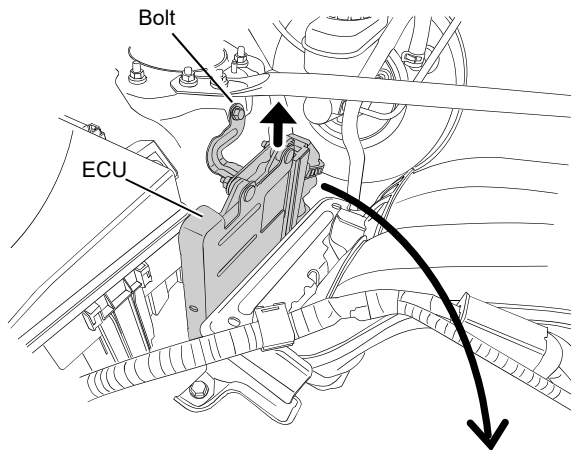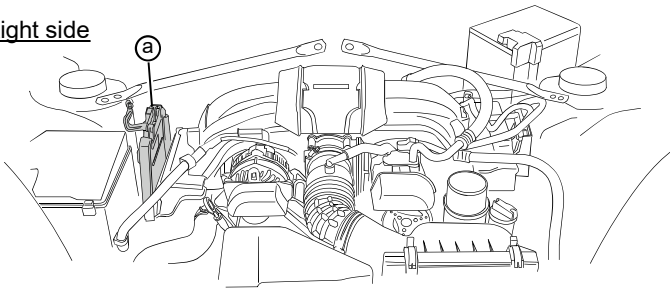


Other side of the ECU

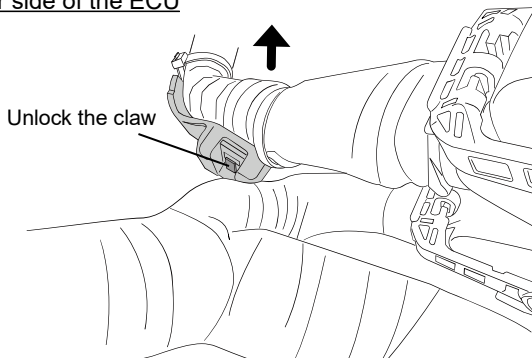

- 2 Remove the ECU fixing bracket.

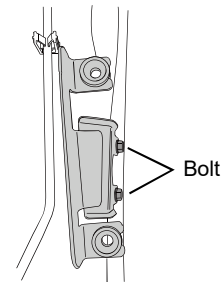


- 3 Remove the ignition coils from the engine and disconnect the coil connectors.

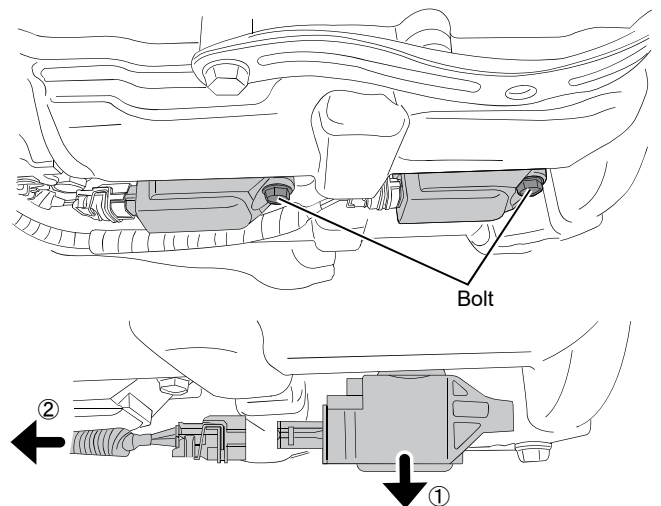


How to disconnect the coil connector


Unlock the fixing tool pushing it in the direction of the arrow.

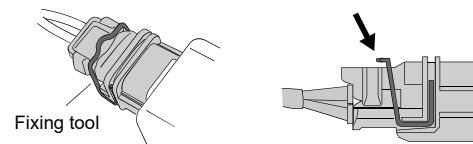

- 4 Remove the plug boots from the ignition coils and attach them to the Plasma Directs.

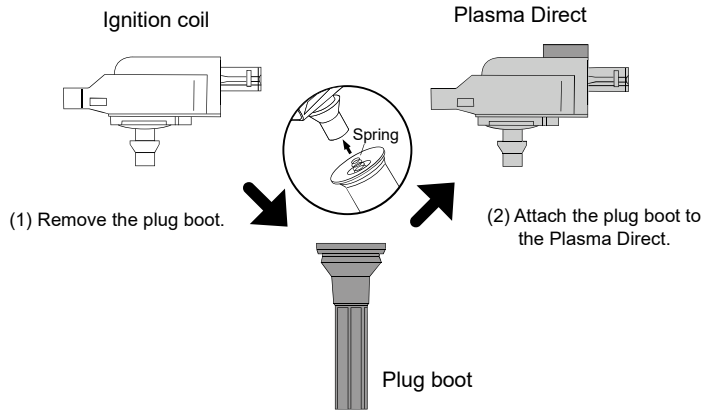


- 5 Install the Plasma Directs to the engine and connect the coil connectors.

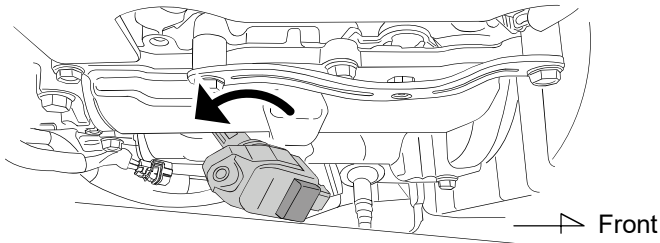


- 6 Mount back properly all the components you removed for the installation.

- 7 Unfix the plastic bracket and remove the fixing bracket (c).

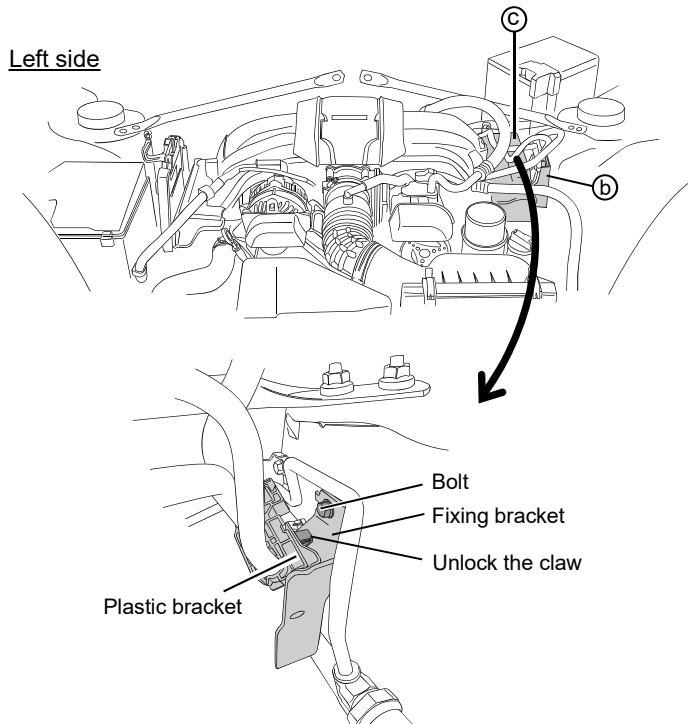

- 8 Remove the engine cover (c).

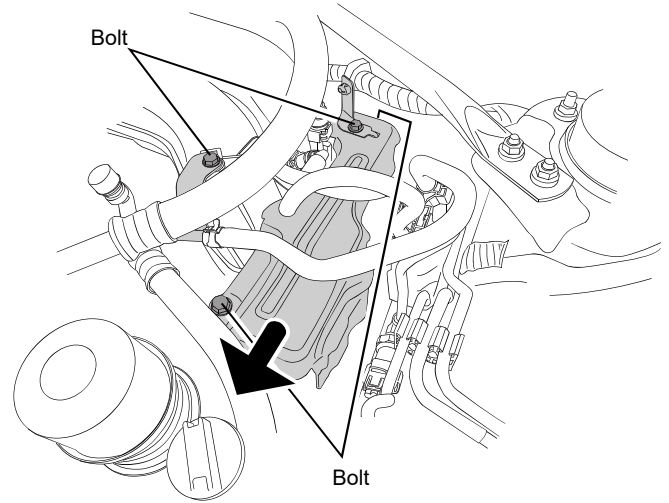

- 9 Repeat steps 3 4 5

- 10 Mount back properly all the components you removed for the installation.

PD4004903R
GR86/BRZ 2/2