


# Prosport Inc.

## EVO Series Boost Gauge

Blue / Red Display

### Digital Boost

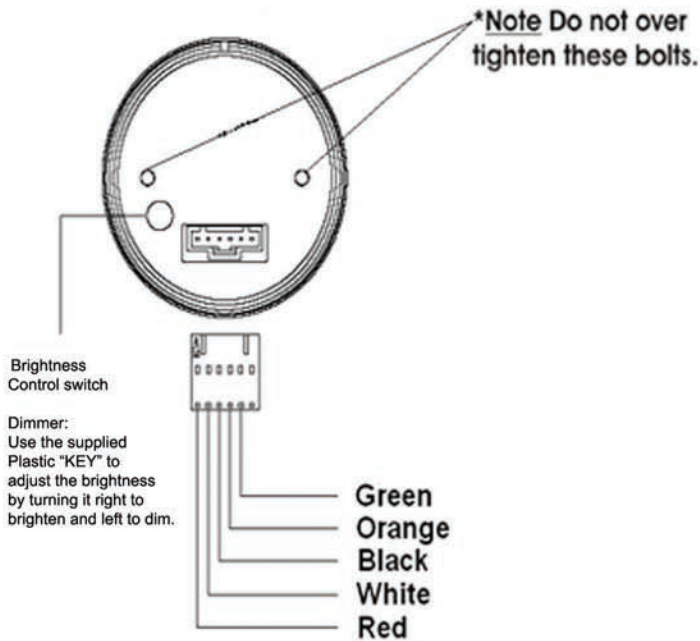


### Wiring Instructions

- Red Wire-** 12v Accessory Power
- White Wire-** 12v Accessory Power
- Black Wire-** Ground
- Orange Wire-** 12v Headlight Switched Power (This is a power source that only gets power when headlights are on)
- Green Wire-** Connects to the White wire from the boost sender


### Lighting Options

Day Time	Night Time	Installation
Blue	Blue	White-- Connect to acc. Power
		Orange-- Do not connect
Red	Red	White-- Do not connect
		Orange-- Connect to acc. Power
Blue	Red	White-- Connect to acc. Power
		Orange-- Connect to Headlight Switched Power
Red	Blue	White-- Connect to Headlight Switched Power
		Orange-- Connect to acc. Power

Cut boost line and install supplied plastic "T" fitting.  
Connect "T" fitting to In-Line Filter with supplied hose.  
Then connect In-Line Filter to sender with supplied hose.

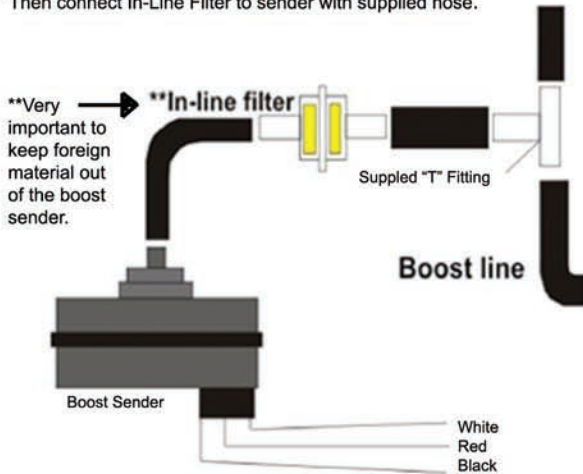

- Black-** Ground
- Red-** 12v Accessory Power
- White-** Green wire from gauge

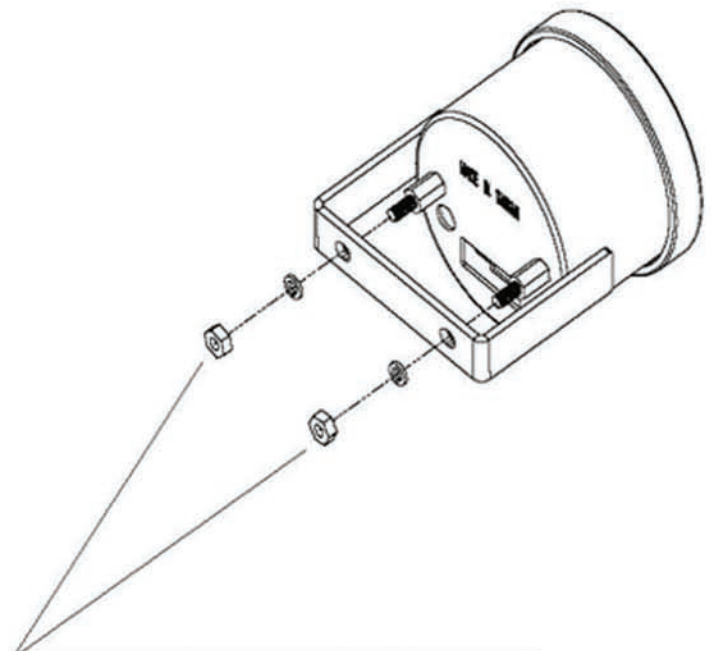

Do not over tighten bolts when installing U bracket. Doing so will cause damage to movement inside.