



**Thank you for purchasing this ALPHA COMPETITION product for your car!**

Installation of this product should only be performed by persons experienced with installation of aftermarket performance parts and proper operation of high performance vehicles. If vehicle needs to be raised off the ground for installation, the installer must use proper jacks, jack-stands and/or a professional vehicle hoist for safety of the installer and to protect property. If the vehicle is lifted improperly, serious injury or death may occur! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached by the following email:

support@alpha-competition.com

### **GENERAL MODIFICATION NOTE**

Modifications to any vehicle can change the handling and performance. As with any vehicle extreme care must be used to prevent loss of control or roll-over during sharp turns or abrupt maneuvers. Always wear seat belts, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive a vehicle safely may result in serious injury or death. Do not drive a vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your country.


Consult the owner's manual, service manual, instructions accompanying these products, and local laws before purchasing and installing these modifications.

**You are responsible for the legality and safety of the vehicle you modify using these components!**




## **ALPHA COMPETITION 2.0 TFSI PCV Delete kit**

### **Installation instructions**

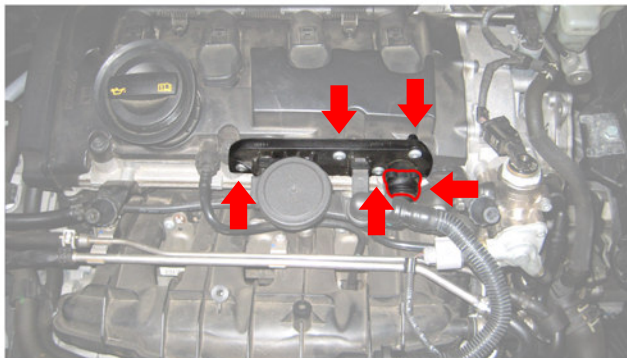

img 1

- Locate the OEM PCV on the valve cover and remove the 4 torx screws and unclip the breather pipe. (img 1)

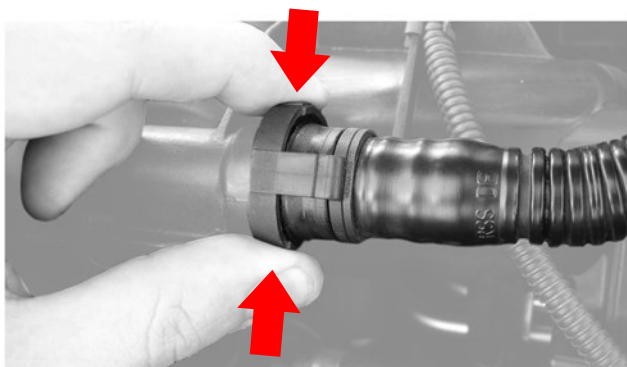


img 2


- Press both ends of the connecting clip and pull out the breather pipe on the intake manifold (img 2)



img 3

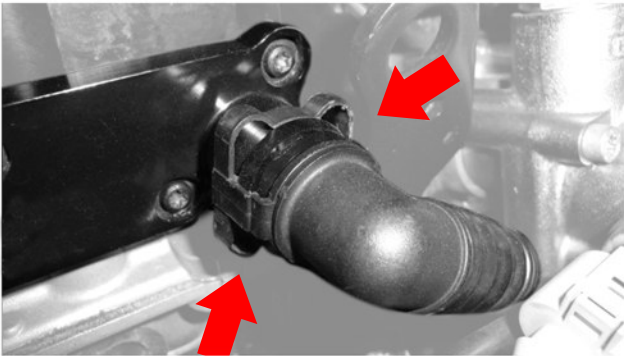

img 4

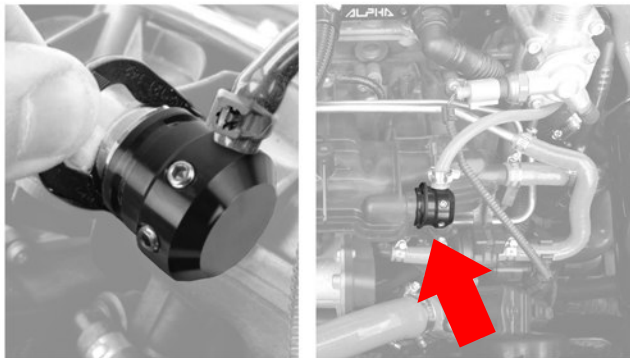

img 5



img 6

- Remove the Positive Crankcase Ventilation system from the valve cover. Check gasket condition and clean the area before installing the ALPHA Competition PCV Delete plate. (img 3)

- Using the 4 OEM torx screws, attach the ALPHA Competition PCV delete plate and gently push fit the remaining lower breather pipe (img 4)

- Push the supplied cap until its fully engaged on the intake manifold and insert the U clip to retain it. (img 5)

- Use the blanking screws or vacuum nipples included in the kit depending on if you run gauges, catch can, vacuum lines or not (img 6)